



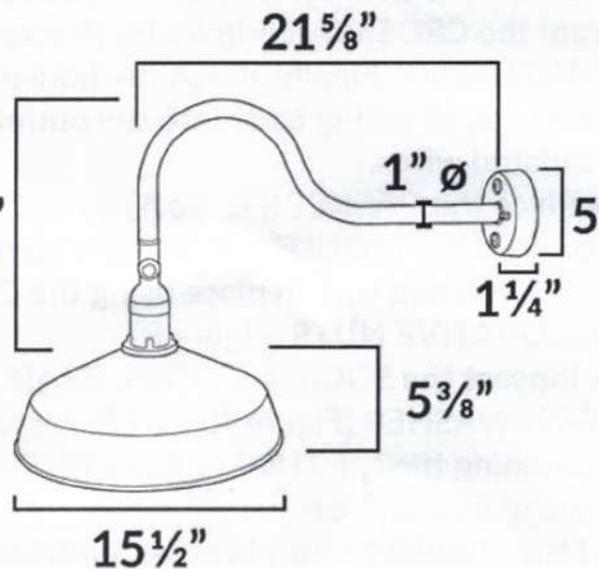

AQLIGHTING

AQDLXS-930/925 Installation Instructions

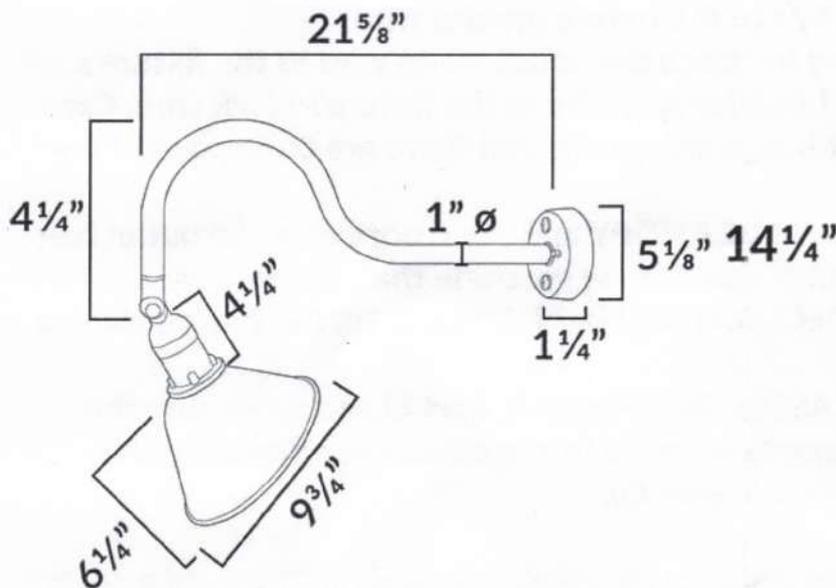

IMPORTANT WARNING

We highly recommend that all installations are performed by a licensed electrical contractor. We are NOT responsible by any means for the use and/or misuse of the following information. We are NOT responsible in part or in whole for any harm and/or damages that may or may not be caused. We reserve the right to revise the components of any product, due to parts availability or changes in ETL, cUL or UL standards without assuming any obligation or liability to modify any

READ CAREFULLY BEFORE INSTALLATION

AQLXS-930 and AQLXS-925 must be wired in accordance with the National Electrical Code and applicable local codes

WARNING - Risk of Fire and / or Personal Injury

- Keep away from Combustibles
- Turn Off / Unplug Power to Change Lamp - **BE SURE THE POWER IS OFF!!!**
- Do Not Operate if Cover Shields are Damaged or Missing on Bulbs
- Allow Fixture to Cool Down before Putting the Lamp to the Socket
- Do Not Use Lamps Designed for Enclosed Fixtures
- Do Not Overload Transformer and / or Cable Rating

INSTALLATION INSTRUCTIONS

1. Pull the supply wire and the house ground wire out from the outlet box through the large center hole in the CROSSBAR (Figure B). Attach CROSSBAR to the outlet box using the mounting screws.
2. Place the WALL CANOPY (Figure A, Part M) over the outlet box and onto the fixture's MOUNTING SCREWS and adjust the fixture mounting screws until they protrude out just enough to allow the decorative nuts to screw in flush to the WALL CANOPY making the screws practically invisible. Remove the WALL CANOPY and secure the position of the MOUNTING SCREWS against the CROSSBAR.
3. Assemble the GOOSENECK ARM (Figure A, Part I) to the WALL CANOPY without the shade. Ensure the arm has been secured tightly in place.
4. Before connecting your wires, make sure that all power to your installation is OFF! Now attach the HOUSE GROUND WIRE to the Fixture's ground wire. Fasten the house ground wire from the center hold of the outlet box to the fixture ground wire from the CROSSBAR (Figure B). Proceed to attach the house white wire to the fixture's WHITE WIRE. Finally attach the house black (or red) wire to the fixture's black wire. Carefully tuck all wiring back into the outlet box, making sure that there are no exposed / un-insulated wires.
5. Place the GASKET (Figure A) on the WALL CANOPY and place both over the outlet box and onto the MOUNTING SCREWS (which should now protrude through the WALL CANOPY) and secure in place using the DECORATIVE NUTS. Place O-RINGS before placing DECORATIVE NUTS (Figure B).
6. Inspect the SOCKET SWIVEL HEAD ASSEMBLY (Figure A, Part E) and make sure the LOCK WASHER (Figure A, Part P) is properly installed to the connecting screw before tightening the the THUMB SCREW (Figure A, Part Q).

SHADE INSTALLATION

1. Place RUBBER GASKET between SHADE and SWIVEL / HEADPIECE, lining up the holes with those in the SWIVEL / HEADPIECE.
2. Line up the METAL WASHER inside the SHADE and line up with the holes, keeping the RUBBER GASKET and SWIVEL / HEADPIECE aligned.
3. With all holes lined up, insert the 4 SHADE SCREWS through the METAL WASHER and SHADE and screw them into the SWIVEL / HEADPIECE to secure the SHADE.
4. Insert the bulb. See labels on the fixture for maximum wattage - **DO NOT EXCEED THE MAXIMUM WATTAGE!**
5. Restore power to installation point.
6. OPTIONAL : Adjust SHADE to ideal position

